

INSTALLTION GUIDE

STEP 1:

Loosen the two screws on the top and turn the cover plate and everything inside the box can be seen as:




STEP 2:

On the output side, choose the knockout hole needed and open up the hole.




STEP 3:

Pass the output wire through hole and connect using connectors. (Follow the wiring diagram below):

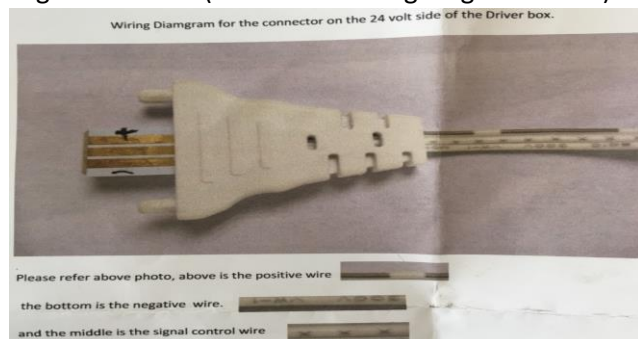


STEP 4:

Remove the strain relief from inside the box and wrap it around the wire and then snap it into the hole.

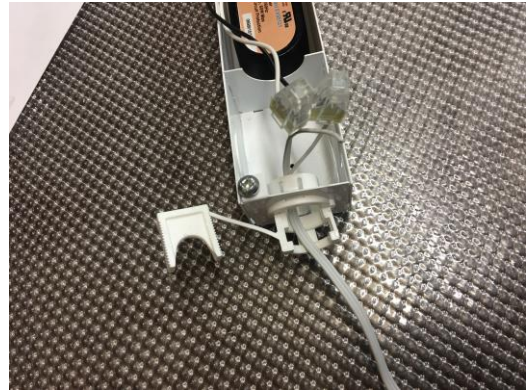

STEP 5:

Secure the wire by adjusting the opening of the hole by moving stopper.

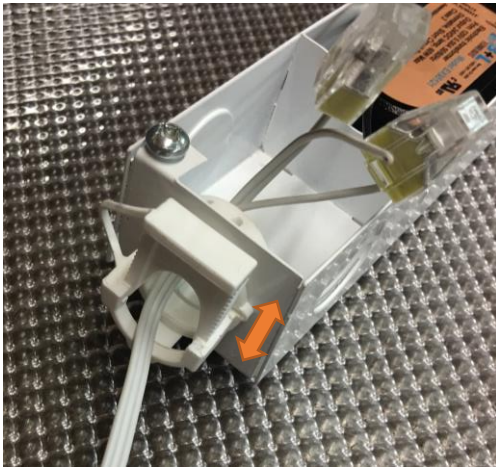

STEP 6:

Repeat step 2-5 for input side.

